 


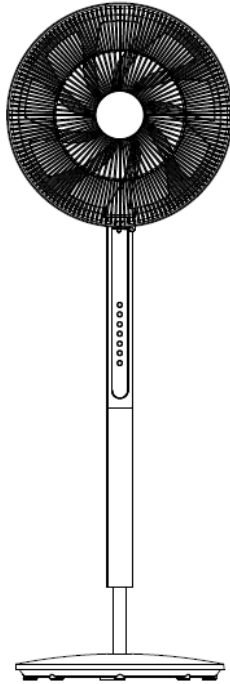

STAND FAN 座地扇

OPERATION MANUAL 使用說明書

RSF-14DCL



僅適用於家庭使用 For Household Use Only

使用前請先詳細閱讀本說明書，並保存以便日後參考。

本說明書中所有圖片僅供解釋用途。

Please read this user manual before using the product and keep it for your future reference.

 
All the pictures in this manual are for reference only.

安全注意事項 (請務必詳細閱讀及遵守安全指導)

1. 請務必嚴格遵守以下說明之注意事項，以防止對使用者或其他人造成傷害或財物損失。
2. 用戶必須使用有安全認證的合格插座，否則，可能會引起火災的危險。
3. 此設備可供 8 歲以上兒童、肢體、感官、心智殘缺或缺乏經驗和知識的人使用，但他們必須已獲得監督和安全使用該設備的指導，並且了解其中的危害。兒童不應將本產品用於玩耍。不得讓兒童在沒有監督的情況下進行清潔和保養。
4. 本設備是不打算供與(包括兒童)身體、感官或智力有障礙，或缺乏經驗和知識人士使用，除非他們是在負責他們安全的人員監督或有關使用該設備的指示下使用。兒童應當受到監督以確保他們不會玩耍器具，請勿讓兒童爬上風扇。
5. 此風扇必須與原裝適配器配合使用。使用前，確保適配器與主體機身已徹底連接，否則會因接觸不良導致產品異常發熱或損壞。
6. 拔掉電源線插頭時須緊握，切勿拉扯電線。
7. 確保電源插頭完全插入插座，否則會引致觸電或插頭過熱而造成火災。
8. 要定期清除電源插頭及插座上之灰塵，否則引致絕緣不良而導致火災。
9. 若電源線有裸露或有損壞時，切勿使用本機。避免危險，必須交由信興電器服務中心有限公司維修。如果電源線損壞或產品出現故障，必須交由信興電器服務中心有限公司更換或維修，以避免危險。切勿自行拆卸、檢修，或更換非生產商提供的配件。
10. 切勿過度擰捏，彎曲或扭轉電源線，否則線芯可能會曝露在外或折斷，並引致觸電，短路，火災及產品損壞。
11. 嚴禁讓機體沾水，否則會導致漏電、短路、產品損壞及導致火災的可能。
12. 為避免過熱，禁止覆蓋機體。
13. 切勿將物品放置在機體上。
14. 手濕時切勿接觸風扇及電源插頭，否則有觸電的危險。
15. 請勿讓手指或其他異物插入機體任何通風或排氣口，這可能會導致觸電、身體損傷、火災或損壞機體。
16. 本機在使用時不可用力敲擊或震動機身。
17. 請勿在陽光直射下使用或保存產品。
18. 電源線要擺放好，防止行走時拌倒。
19. 風扇要放在平坦堅實的地面上使用。
20. 嚴禁在以下場所使用風扇：接近氣體爐具/有易燃氣體的地方/有雨淋或容易被滴水的地方/接近殺蟲劑的地方/油性的腐蝕性溶劑附近/高溫的地方/潮濕的地方/在化學物品、油、多塵的地方。
21. 機體上方不可掛滴水的衣物或受到雨淋，避免進水引致漏電危險。嚴禁將易燃物及未乾的衣物覆蓋在機器出風口上，避免發生火災或觸電危險。
22. 請勿在產品周圍噴灑殺蟲劑及可燃性噴霧劑，否則可能使產品受損。


23. 為了安全起見，當人離開產品時，必須關機，以免發生意外事件。
24. 避免將產品出風口長時間、直接向幼兒吹風。
25. 產品清洗或移除面蓋前必須先切斷電源並拔掉電源線插頭。
26. 產品外殼清潔時，應用濕布(或加點中性清潔劑)抹擦，不要有有腐蝕性的洗滌劑或溶劑之類清潔，嚴禁用水沖(淋)洗。
27. 不可將本機進、出風口貼近牆壁、窗簾等物品，否則會阻塞氣流，影響使用效果。
28. 本機在使用一段時間後，若出現異聲或風速不均勻的現象，可能是後殼進風口處的灰塵太多阻塞了氣流，此時用毛刷清潔一下後即可恢復正常。
29. 產品長期不使用時，應拔下電源插頭，包好本機防止灰塵進入機內，並放置乾燥通風處存放。

部件名稱

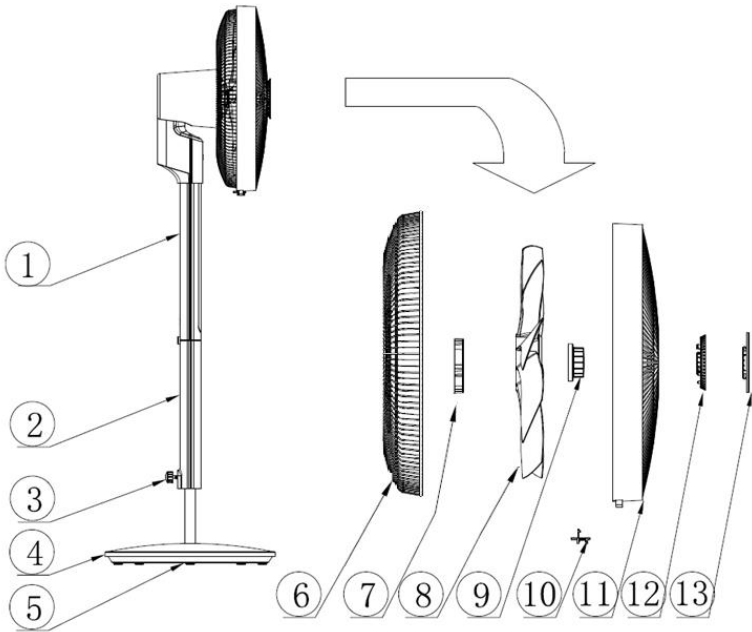


- | | | |
|----------|------|--------|
| ① 主體機身 | ⑥ 後網 | ⑩ 網圈鎖扣 |
| ② 立柱組件 | ⑦ 網束 | ⑪ 前網 |
| ③ 高度調節旋鈕 | ⑧ 風葉 | ⑫ 香薰盒 |
| ④ 底盤組件 | ⑨ 葉束 | ⑬ 香薰盒蓋 |
| ⑤ 底盤螺栓 | | |

 控制面板

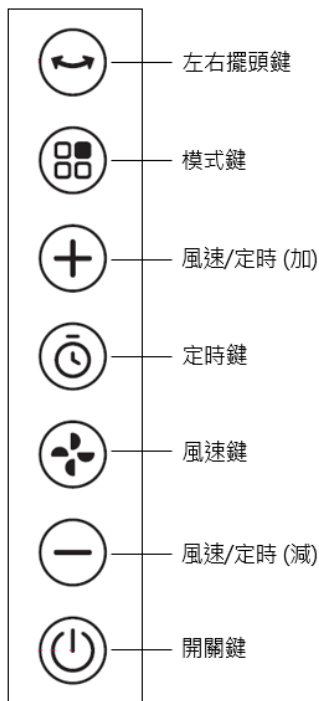


遙控器

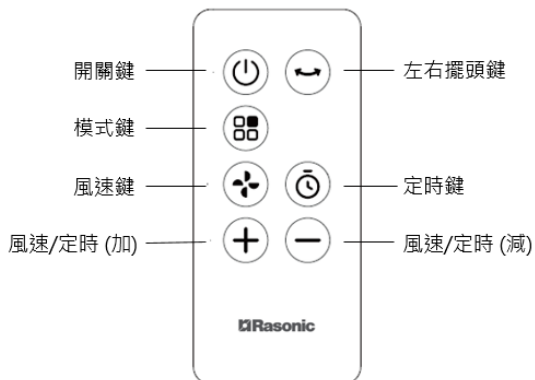 


更換遙控器電池

 - 遙控器背面有一個電池盒，請在壓下電池盒側面的同時將其拉出。
- 正面朝上放入硬幣形鋰電池(3V CR2032)。
- 放入電池後，滑動電池盒，然後插入並固定電池盒。

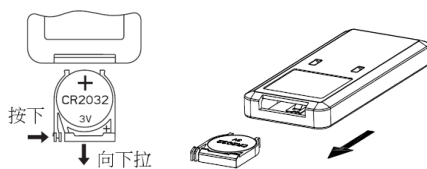

安裝方法

 - ① 將立柱組件的底部插入底盤組件的中間孔內，然後用底盤螺栓鎖緊立柱組件。(圖 1)
- ② 將主體機身對準並完全套入立柱組件的頂部卡扣位。(圖 2)
- ③ 將後網放入到電機前，電機的上下兩個定位柱對準後網罩的定位孔，用網束擰入固定。(圖 3)
- ④ 將風葉插入到電機軸上，風葉中間的背部對準電機軸上的兩個定柱，然後用葉束逆時針擰入固定。(圖 4)
- ⑤ 將前網上的 7 個扣位完全扣入到後網上，然後再扣上網圈鎖扣裝置，擰入固定螺絲固定網罩。(圖 5)
- ⑥ 風扇組裝完畢後，將風扇接通電源並按說明書操作使用。

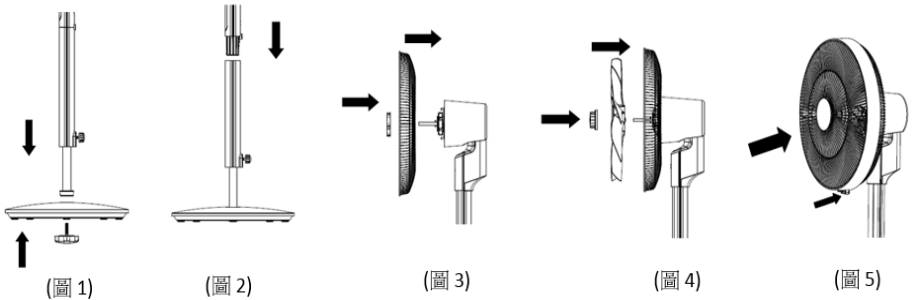

警告：安裝風扇時，禁止將電源線插頭插在電源插座裡，嚴禁未組裝好之前通電使用。

清潔保養

- 清潔、保養或移動產品前，必須先關閉產品，然後拔除電源插頭。必須待風扇完全停止轉動後才可清潔，以免受傷。
- 請使用濕潤軟布抹擦清潔風扇表面。
- 清潔完畢，必須待產品完全乾燥，才可使用。







其他注意事項：


- 安裝時，請確保扇葉已完全嵌入，否則扇葉可能無法轉動及正常運作。
- 切勿將電源線、插頭或主機浸在水中清潔或在水龍頭下沖洗，風扇內部零件不可沾水。
- 切勿使用鋼絲刷、汽油、火酒、醋或其他揮發、有毒或含腐蝕性液體清潔產品，以免損壞產品。用微濕的布清潔風扇表面即可。
- 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞。
- 建議最少每個月清潔產品一次。
- 如長時間不使用產品，請將產品收藏回包裝盒內並放置在乾燥陰涼且安全的地方。

操作說明

請把風扇放在一個穩定的平面上使用。把電源插頭連接到一個合適的電源插座上。

觸摸操作面板或遙控器按鍵位，則可使用相應的功能。

	<p>開關鍵:</p> <p>1. 在待機狀態下，按下此鍵可使風扇進入到工作狀態，以上次記憶的工作模式運行（睡眠風和定時功能除外）。若是因第一次通電，則以默認工作模式運行（即 10 檔，正常風，不擺頭，無定時，風扇指示燈亮起，數碼管顯示當前風速）。</p> <p>2. 在工作狀態下，按此鍵進行關機，蜂鳴器發出“ 唛— ”，風扇停止轉動，系統回到待機狀態，系統無任何輸出和顯示。</p>
	<p>左右擺頭鍵:</p> <p>開機狀態下，按此鍵可以開啟或關閉切換左右擺頭角度功能。按下左右擺頭鍵以 30°→90°→180°→320°→關閉，循環切換，左右擺頭角度指示燈對應點亮顯示其功能。</p>
	<p>模式鍵:</p> <p>首次開機，正常風運行，按模式鍵可進行模式風切換，其轉換順序：正常風→自然風☼→睡眠風☾→正常風.....，當以正常風運行時無指示燈顯示，其他模式風相應指示燈顯示其功能。</p> <p>正常風：分 32 個風速檔位，以固定轉速運行的模式。</p> <p>自然風☼：32 個風速檔位元共分為三組。</p> <p>① 1~10 檔正常風轉為自然風，為低檔自然風，數碼管顯示 10 檔；</p> <p>② 11~20 檔正常風轉為自然風，為中檔自然風，數碼管顯示 20 檔；</p> <p>③ 21~32 檔正常風轉為自然風，為高檔自然風，數碼管顯示 32 檔；</p> <p>在此模式中風速鍵只能選擇低、中、高檔自然風。</p> <p>睡眠風☾：依照用戶設定的風速檔位，按照程式預設的規律進行定時降檔的運行模式。</p> <p>高速：30 分鐘 32 檔正常風→30 分鐘 20 檔正常風→10 檔正常風運行直至關機。</p> <p>中速：30 分鐘 20 檔正常風→10 檔正常風運行直至關機。</p> <p>低速：10 檔正常風運行直至關機。</p>
 	<p>風速/定時 (加/減):</p> <p>1) 未進入定時設置模式時可進行風速檔位調整，此時用+鍵或-鍵對設定值進行加、減調節。(1↔2↔3↔4↔5↔...↔31↔32)，數碼管顯示當前檔位，風速指示燈點亮。</p> <p>2) 進入定時設置模式時，按此鍵可增加定時關機/開機時間，此時用+鍵或-鍵對設定值進行加、減調節。(1↔2↔3↔4↔5↔...↔12)，數碼管顯示當前設定時間，“h” 指示燈點亮。</p>
	<p>定時鍵:</p> <p>1) 在開機狀態下按定時鍵，處於定時設置狀態，時間指示燈“h” 點亮，數碼管以 0.5</p>

	<p>秒亮/滅閃爍，默認為 1，不顯示首碼 0。此時用⊕鍵或⊖鍵對定時值進行加、減調節（1↔2↔3↔4↔5↔...↔12），設置完成後按其他鍵（除了電源鍵或定時鍵）或者等待 5 秒可成功設置定時時間。當數碼管處於閃爍，顯示定時時間時，再次按下定時鍵，定時關閉，相應的指示燈熄滅。當設定了定時，倒計時結束後，立即進入待機狀態，不發出聲音。</p> <p>2) 在待機狀態下，按下定時鍵可以對機器的工作時間做預定，時間指示燈“h”點亮，數碼管以 0.5 秒亮/滅閃爍，默認為 1，不顯示首碼 0。此時用⊕鍵⊖鍵對定時值進行加、減調節。確定預約開機時間後等待 5 秒可成功設置預約時間。預約後，數碼管顯示預約時間，時間指示燈亮起。當內部計時程式計時到達後，機器就會在預約時間開機，並記憶上次開機前功能（睡眠風模式、定時功能除外）。</p>
	<p>風速鍵:</p> <p>1) 在開機狀態下（進入定時設置模式時），按風速鍵，可切換為風速檔位調整狀態，此時用⊕鍵或⊖鍵對設定值進行加、減調節。（1↔2↔3↔4↔5↔...↔31↔32），數碼管顯示當前檔位，風速指示燈點亮。</p> <p>2) 在開機狀態下（未進入定時設置模式時），無需按風速鍵為風速檔位調整狀態，此時用⊕鍵⊖鍵對設定值進行加、減調節。（1↔2↔3↔4↔5↔...↔31↔32），數碼管顯示當前檔位，風速指示燈點亮。</p>

記憶功能：

在開機狀態時，檔位，擺風等功能均被記憶（定時功能，睡眠風模式除外）。

指示燈亮度自動變暗功能：

在任何指示燈點亮 1 分鐘後，如果此時按鍵無動作，則指示燈變暗，此時按鍵再動作，則指示燈變亮。

規格

產品型號	RSF-14DCL
顏色	白色
額定電壓	直流 24 伏特
額定功率	33 瓦
適配器輸入電壓/頻率/電流	100-240 伏特~，50-60 赫茲，1.2 安培
適配器輸出電壓/電流/功率	直流 24 伏特，1.5 安培，36 瓦
外型尺寸（寬×深×高）	255 x 416 x 1150-1250 毫米
淨重	5.7 公斤

特別聲明

1. 本資料上所有內容經過認真核對，如有任何印刷及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及顏色如有改動，則以實物為準。
3. 用戶如需要電子版使用說明書，請致電信興電工工程有限公司熱線查詢：2861 2767。

售後服務

由購買日期起之一年保修期內，經信興電器服務中心有限公司之服務人員證實乃在正常使用之情況下發生者，本公司將提供免費修理及更換零件。經更換之任何損壞零件，將歸屬本公司。保修範圍不包括修理或更換產品之附件、外接線及機殼等，如有需要服務時，用戶須另付費用。用戶請於維修時出示購買收據 / 換購收據及保修證，如有任何疑問，請致電信興電器服務中心有限公司熱線查詢：2406 5666。

 
如在保修證內所列之電器：1.) 曾經被非本公司技術人員明顯地或非明顯地進行改裝、更改或修理；或 2) 曾經被錯誤或不適當或疏忽使用、或因液體浸蝕、水濺、不正常供電、天災、意外或外來因素造成損壞；或 3) 並非安裝在陸上固定地點；或 4) 不當安裝位置影響正常操作；或 5) 非工商業用型號產品，被用作工商業用途；或 6) 用戶搬遷地址或更換物主而未能及時通知信興電器服務中心有限公司者，保修證將自動失效。

SAFETY PRECAUTIONS (Be sure to read carefully and follow these safety instructions)

1. Be sure to read the following safety precautions, in order to avoid possible injury to yourself or others and damage to your belongings.
2. The user must use qualified socket with safety certification, or it may cause fire.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Do not allow children to climb on the fan.
5. Only use the fan with the original adapter. Make sure that the adapter and main body are well connected before use, otherwise it will cause the appliance overheat or damage due to contact failure.
6. Hold the main plug when disconnect from the power supply, never pull the supply cord.
7. Make sure main plug is fully inserted into socket. Loose engagement of main plug and socket may cause electric shock or fire due to overheating of the main plug.
8. Wipe off dust on the main plug and socket periodically. Accumulation of dust on main plug may cause poor insulation and may result in fire.
9. Do not use the fan when the power cord or main plug is damaged. If the supply cord is damaged, it must be replaced by the Shun Hing Electric Service Centre Limited in order to avoid the hazard. If the power cord is damaged or the fan is malfunction, please take the fan to Shun Hing Electric Service Centre Limited for repairing. Do not disassemble, repair or replace with parts and accessories without authorities.
10. Do not pinch, bend, or twist the power cord excessively. The core conductors may be exposed or broken which may cause electric shock, short circuit, fire and product damage.
11. Do not contact with water. It may cause electric leakage, short circuit, product damage and fire.
12. Do not cover the fan in order to avoid overheating.
13. Please do not put any object on the fan body.
14. Never touch the fan and power plug with wet hands to avoid electric shock.


15. Do not insert fingers or conductive object into the front and back air outlets of the machine to avoid the risk of electric shock, human injury, fire or damage of appliance.
16. Avoid any concussions or shocks to the fan.
17. Do not use or place the fan in the sunshine.
18. Put the power cord correctly in case trip over by it.
19. Put the fan on the flat and stable ground when using the fan.
20. Do not use the fan under the following situation: Near gaseous fuel cooker/ Place with full of inflammable gas/ Place exposed to rain or water drop/ Near insecticide/ Oil corrosive solvent/ High temperature/ High humidity/ Near chemical, oil and dust area
21. Please do not let the rain drop or hang wet clothes over the machine so as to avoid current leakage and electric shock; Please do not put flammable materials and wet clothes covered on the air outlet so as to avoid risk of fire or electric shock.
22. Please do not spray insecticide, solvent or flammable liquid to the fan as it may cause damage to the fan.
23. Please shut down the machine before the user leave the machine so as to avoid accidents.
24. Avoid continuously exposure of direct wind from the fan especially to infant and children.
25. The power must be cut off and unplugged before cleaning or maintenance. Ensure that the fan is switched off from the supply main before removing guard/ cover.
26. Please clean the machine by using a damp cloth (or a damp cloth with some mild detergent), do not use corrosive detergent or solvent and such similar cleaning products, do not pour water into the machine.
27. Please do not put the air intake and outlet of the fan close to the wall or curtain, otherwise the air flow will be blocked and affect the fan performance.
28. If it occurs problems of abnormal sound or uneven wind speed after using for some times, perhaps there is too much dust in the air intake grid and make the air flow blocked, the fan could get right by cleaning the fan with a plastic brush.
29. Cut off the power if the unit is not used for a long period of time. Pull out the plug, pack the fan well to protect it away from dust and keep it in the dry, well-ventilated and clean place.

PART NAME

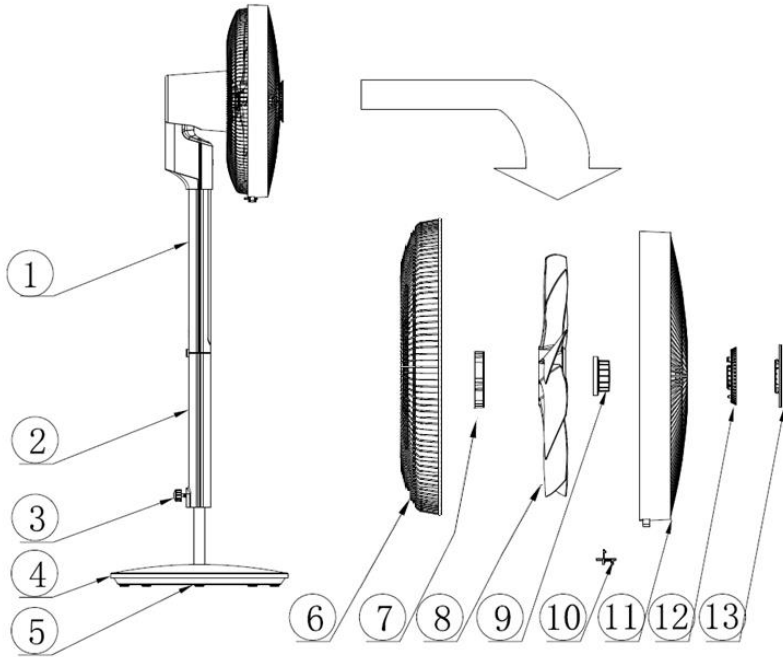


- | | | |
|---------------------------|---------------------|--------------------------|
| ① Main Body | ⑥ Rear Guard | ⑩ Guard Clip |
| ② Stand Assembly | ⑦ Guard Stopper Nut | ⑪ Front Guard |
| ③ Height Adjustment Screw | ⑧ Fan Blade | ⑫ Aromatherapy Box |
| ④ Base Assembly | ⑨ Spinner | ⑬ Aromatherapy Box Cover |
| ⑤ Base Bolt | | |

 CONTROL PANEL

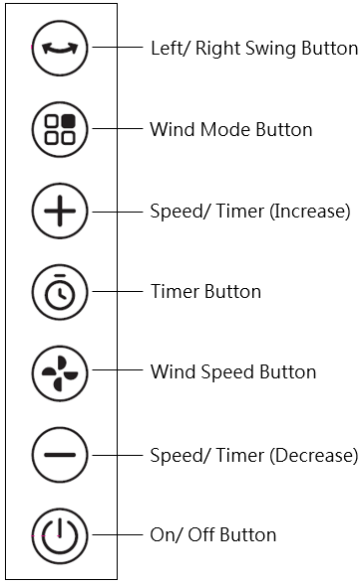


REMOTE

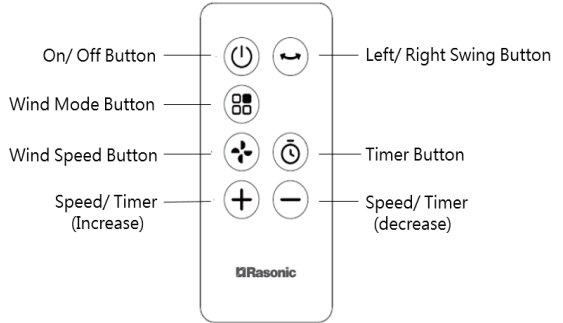 


BATTERY REPLACEMENT

 - ① Pull out the battery case from the main body of the remote control and pull out the battery holder from the gap.
- ② Insert into the coin lithium battery, keep the positive pole upwards (3V CR2032).
- ③ After inserting the battery, slide the battery box, then insert and fix the battery box.

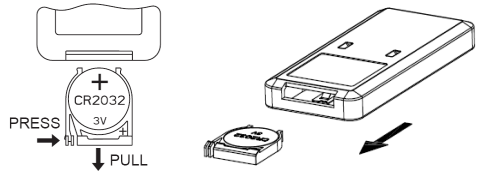


INSTALLATION

 
- ① Insert the bottom of the stand assembly into the hole of base assembly, and then use the base bolt to lock the base assembly. (Figure 1)
- ② Align and put the main body into the top of the stand assembly. (Figure 2)
- ③ Put the rear guard in the front of the motor, the upper and lower columns of the motor are aligned with the upper and lower holes of the rear guard, fix it with the guard stopper nut. (Figure 3)
- ④ Insert the fan blade into the motor shaft and screw it in counterclockwise with the spinner. (Figure 4)
- ⑤ 7 buckles of front guard were fully buckled on the rear guard, buckle and screw the guard clip on the rear guard. (Figure 5)
- ⑥ After the fan is assembled, connect the fan to the power supply and operate it according to the operation manual.

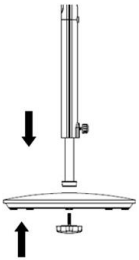


(Figure 1)

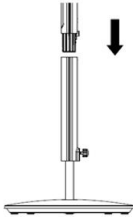 

(Figure 2)

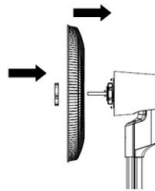 

(Figure 3)

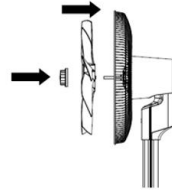 

(Figure 4)



(Figure 5)

WARNING: It is forbidden to insert the plug into the power socket when installing the fan. It is forbidden to operate the fan before assembled.

CLEANING AND MAINTENANCE

1. Always unplug the unit before cleaning, maintenance or moving. To avoid danger, unplug the unit and wait until the fan stop running before cleaning.
2. Clean the surface of fan with a soft damp cloth.
3. After cleaning, please dried up the fan before use.

ADDITIONAL ADVICES




- While installing the unit, make sure fan blade is inserted completely. If not, the fan blade could not rotate and the unit could not work properly.
- Do not immerse the power cord, plug and the whole unit into water or rinse under the tap. The internal components are not allowed to get wet.











- Do not use metal brush, gasoline, benzene, thinner, poisonous or corrosive detergent to clean the unit to avoid damage of the appliance. Use a damp cloth to clean the surface of fan.
- When store, never wrap the power cord tightly around the appliance or put any pressure to the power cord so as to avoid power cord damage.
- It is recommended to clean the fan every month.
- If the fan will not be used for a long time, store it in the cool, dry and safety place.


HOW TO USE

Place the fan on a stable and flat surface. Insert the plug into power supply outlet.

Press the buttons on control panel or remote control to select function.

	<p><u>On/ Off Button:</u></p> <p>1) In standby state, press this button to turn on the fan in the mode memorized last time (sleep mode and timer are excluded). If it is turned on for the first time, it will run in the default mode (in level 10, normal wind, no swing, no timer, the indicator lights up, and the digital tube displays the current wind speed).</p> <p>2) In working state, press this button to turn off the fan, the buzzer beeps, the fan stops operating, and the system returns to the standby state without any output and display.</p>
	<p><u>Left/ Right Swing Button:</u></p> <p>In power-on state, press this button to turn on or turn off the left/right swing. Press it repeatedly to switch among 30°→90°→180°→320°→off, and the left/right swing angle indicator lights show its function correspondingly.</p>
	<p><u>Wind Mode Button:</u></p> <p>When the fan is turned on for the first time, it operates in normal wind mode. You can press the wind mode button to switch the wind mode in the following sequence: normal→ natural☼→ sleep☾→ normal..... When operating in normal wind, no indicator light is on, while in other modes, the corresponding indicator shows its function.</p> <p>Normal wind: The product operates in accordance with the wind speed (32 levels) selected by the user and operates at a fixed speed.</p> <p>Natural wind☼: The 32 levels are divided into three groups. The specific design is as follows:</p> <p>① When switching to natural wind from level 1~10 normal wind, it is low level natural wind, and digital tube displays level 10;</p>

	<p>② When switching to natural wind from level 11~20 normal wind, it is medium level natural wind, and digital tube displays level 20;</p> <p>③ When switching to natural wind from level 21~32 normal wind, it is high level natural wind, and digital tube displays level 32;</p> <p>In this mode, the wind speed button can only be low, medium or high level natural wind.</p> <p>Sleep wind : Downshift regularly according to the rules preset by the program at the wind speed selected by the user.</p> <p>High speed: 30 minutes level 32 normal wind → 30 minutes level 20 normal wind → level 10 normal wind until turn-off.</p> <p>Medium speed: 30 minutes level 20 normal wind → level 10 normal wind until turn-off.</p> <p>Low speed: Normal wind operation at level 10 until turn-off.</p>
<p></p> <p></p>	<p><u>Speed/ Timer (Increase/Decrease):</u></p> <p>1) The wind speed level can be adjusted when it is not in the timer setting mode. Use the  or  button to adjust the wind speed(1↔2↔3↔4↔5↔...↔31↔32). The digital tube displays the current wind speed, and the wind speed indicator light is on.</p> <p>2) In timer setting mode, press the  or  button to increase/decrease the value of schedule turn-off/start time(1↔2↔3↔4↔5↔...↔12). The digital tube displays the current set time, and the "h" indicator light is on.</p>
<p></p>	<p><u>Timer Button:</u></p> <p>1) Press the timer button in power-on state to enter the timer setting state. The time indicator "h" is on, and the digital tube flashes at an interval of 0.5 second. The default value is 1, and the prefix 0 is not displayed. At this moment, use the  or  button to adjust the value (1↔2↔3↔4↔5↔...↔12), press any other button (except ON/OFF and timer) or wait for 5 seconds to complete the timer setting successfully. When the digital tube is flashing and displaying the set time, press the timer button again to turn off the timer and the corresponding indicator light goes out. When the timer is set and the countdown ends, the fan immediately enters the standby state without any sound.</p> <p>2) In standby state, press the timer button to reserve working time of the fan. The time indicator "h" lights up, and the digital tube flashes at an interval of 0.5 second. The default value is 1, and the prefix 0 is not displayed. At this</p>

	<p>moment, use the ⊕ or ⊖ button to adjust the time. After selected the time value, wait for 5 seconds to set the reservation time successfully. After making a reservation, the digital tube displays the reserved time, and the time indicator lights up. When the internal timer program reaches the set time, the fan will turn on and operate in the state as previous operation (sleep wind and timer are not memorized).</p>
	<p>Wind Speed Button:</p> <p>1) In power-on state (in timer setting mode), press the wind speed button to switch to the wind speed level adjustment state, and use the ⊕ or ⊖ button to adjust the value. (1↔2↔3↔4↔5↔...↔31↔32) The digital tube displays the current level position, and the wind speed indicator light is on.</p> <p>2) In power-on state (not in timer setting mode), you do not need to press the wind speed button. Simply use the ⊕ or ⊖ button to adjust the value. (1↔2↔3↔4↔5↔...↔31↔32) The digital tube displays the current level position, and the wind speed indicator light is on.</p>

Memory Function

In power-on state, the wind level, swing and other functions are all memorized (except timer and sleep wind mode).

Indicator Light Dimming Function

If no button pressed after any indicator light is on for 1 minute, the indicator light will be dimmed. If any button is actuated again, the indicator light will become brighter.

SPECIFICATION

Model	RSF-14DCL
Colour	White
Rated voltage	DC 24V
Rated power	33W
Adapter input voltage/ frequency/ current	100-240V~, 50-60Hz, 1.2A
Adapter output voltage/ current/ power	DC24V, 1.5A, 36W
Dimension (W×D×H)	255 x 416 x 1150-1250mm
Net weight	5.7 kg

SPECIAL AVOWAL

1. The information above has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the operation manual will be updated without any prior notice. The product appearance and color are subject to the actual appliance.
3. The e-copy of user manual can be sent by e-mail on requested, please call Shun Hing Electric Works & Engineering Co. Ltd. hotline at 2861 2767.

AFTER SALES SERVICES

For any defect, in the judgment of technician from Shun Hing Electric Service Centre Limited, caused under normal use, we are responsible for repairing or replacing parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defective part which has been replaced shall become our property. Guarantee service does not cover the repair or replacement of accessories, external cables or cabinet, etc. Additional charges shall be levied if services are required. Please present the official invoice and the guarantee certificate with the sales point's chop or the redemption center's chop for free maintenance. For enquiries, please call Shun Hing Electric Service Centre Limited hotline at 2406 5666.

Free guarantee service will not be provided to the fan if: 1) it has been explicitly or implicitly modified, tampered with, altered or repaired in any way by persons other than technicians of the Company. Or 2) it has been damaged through misuse, negligence, liquid ingress or corrosion, power interruption, natural calamities or accident or external factors. Or 3) it is not a fixed installation on land. Or 4) the normal operation of the fan is affected by improper installation. Or 5) the domestic model of fan is used for industrial or commercial purpose. Or 6) the change of location or ownership of the fan and did not inform Shun Hing Electric Service Centre Limited.

信興電工工程有限公司

SHUN HING ELECTRIC WORKS & ENGINEERING CO., LTD

辦公室：香港九龍尖沙咀東部麼地道 67 號半島中心 9 樓

OFFICE: 9/F, PENINSULA CENTRE, 67 MODY ROAD, TSIMSHATSUI EAST, KOWLOON, HONG KONG

電話 TEL: (852) 2861 2767

傳真 FAX: (852) 2865 6706

網址 WEBSITE: www.rasonic.com

電郵 EMAIL: shew@shunhinggroup.com

保養及維修 MAINTENANCE AND REPAIR SERVICE

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

辦公室：香港新界葵涌勝耀街2號信興中心11樓

OFFICE: 11TH FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5666

傳真 FAX: (852) 2408 0316

網址 WEBSITE: www.shesc.com

消耗品/附件銷售熱線 CONSUMABLES/ ACCESSORIES SALES HOTLINE

電話 TEL: (852) 2406 5666

客戶服務中心 CUSTOMER SERVICE CENTRES

香港新界葵涌勝耀街2號信興中心1樓

1ST FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5439

傳真 FAX: (852) 2408 1389

澳門慕拉士大馬路193-199號南嶺工業大廈5樓1座

AVENIDA DE VENCESLAU DE MORAIS, NO. 193-199, 5 ANDAR-I, EDF. INDUSTRIAL NAM LENG, MACAU

電話 TEL: (853) 2836 2928

傳真 FAX: (853) 2833 6405

有關最新之客戶服務中心資訊，請參閱信興服務中心網址：www.shesc.com或致電維修服務熱線查詢。

For the latest information of customer service centres, please visit www.shesc.com or call us at our hotline.

